

FRONT FOG LAMP


< REMOVAL AND INSTALLATION >

[LED HEADLAMP]

FRONT FOG LAMP

Exploded View

INFOID:000000010338858

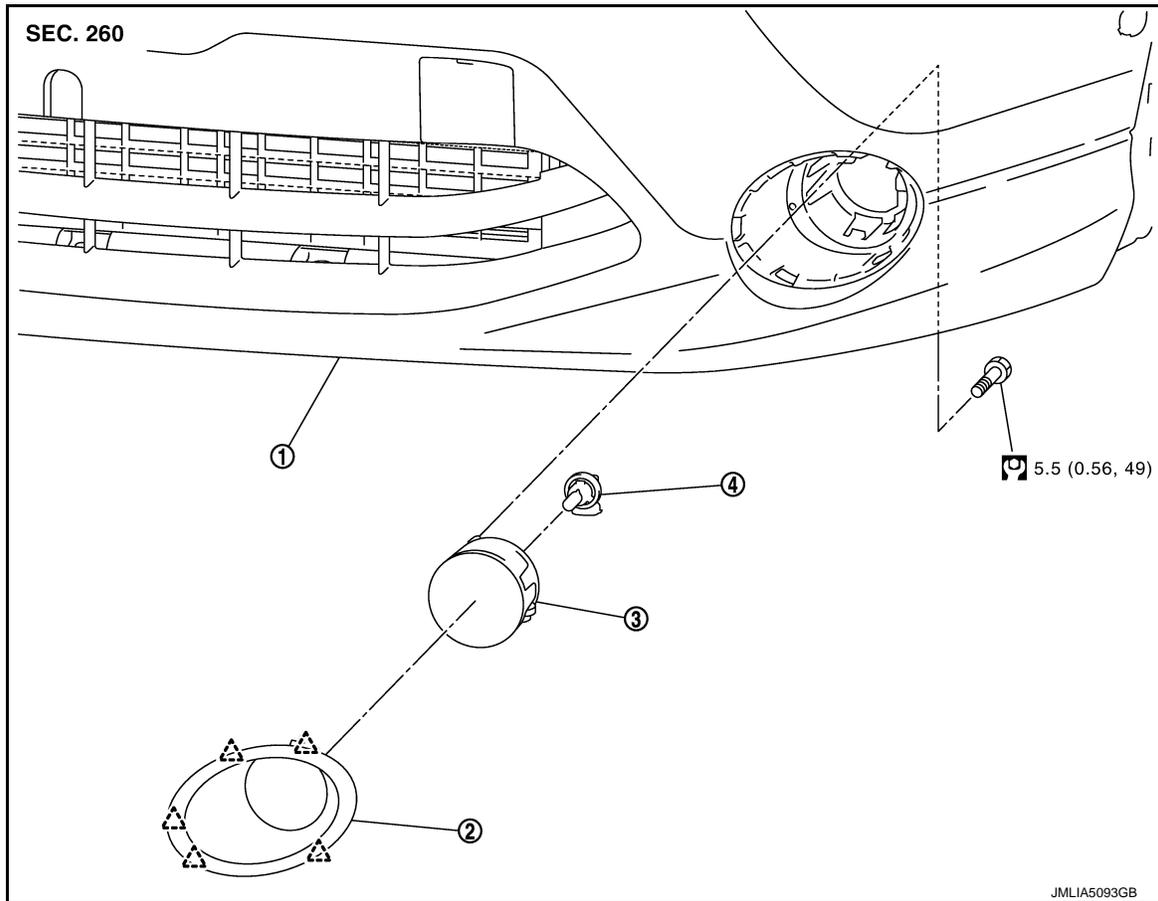

① Front bumper fascia

② Front bumper finisher

Front fog lamp

④ Front fog lamp bulb

 : N·m (kg-m, in-lb)

Removal and Installation

INFOID:000000010338859

CAUTION:

Disconnect the battery negative terminal or remove power circuit fuse when performing the operation for preventing electric leakage. Refer to [EXL-8, "Precautions for Removing Battery Terminal"](#).

REMOVAL

1. Remove front fender protector to make work space. Refer to [EXT-32, "Removal and Installation"](#).
2. Disconnect front fog lamp harness connector.
3. Remove front fog lamp fixing bolt, and then remove front fog lamp.

INSTALLATION

Note the following item, and then install in the reverse order of removal.

NOTE:

After installation, perform aiming adjustment. Refer to [EXL-158, "Aiming Adjustment Procedure"](#)

Replacement

INFOID:000000010338860

CAUTION:

FRONT FOG LAMP


< REMOVAL AND INSTALLATION >

[LED HEADLAMP]

- Disconnect the battery negative terminal or remove power circuit fuse when performing the operation for preventing electric leakage. Refer to [EXL-8, "Precautions for Removing Battery Terminal"](#).
- Never touch the glass of bulb directly by hand. Keep grease and other oily matters away from it.
- Never touch bulb by hand while it is lit or right after being turned OFF.
- Never leave bulb out of lamp reflector for a long time because dust, moisture smoke, etc. may affect the performance of lamp. When replacing bulb, be sure to replace it with new one.

FRONT FOG LAMP BULB

1. Remove fender protector to make work space. Refer to [EXT-32, "Removal and Installation"](#).
2. Disconnect front fog lamp harness connector ①.
3. Rotate front fog lamp bulb ② counterclockwise and unlock it.

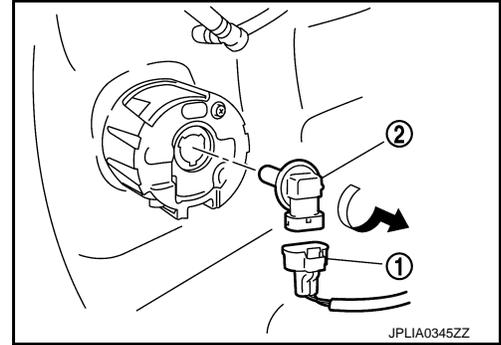

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

EXL